



The GermBuster™ Saber produces Far-UV 222nm light that is safe for human exposure. The photons are unable to penetrate the protective layers of our skin and eyes. It is maintenance-free, no ozone, environmentally friendly, pathogen destruction.



Use the Sterilray GermBuster Saber to disinfect high-touch surfaces. The saber will produce a high disinfection level on any surface it is passed over. The GermBuster saber can be used in a dual role for surface disinfection and mounted for air disinfection. The GermBuster Saber is ideal for disinfecting areas that are seldom treated, like nurses' stations, computer workstations, chairs, curtains, papers, notebooks and electronics.

Purposely designed for air and surface disinfection:

- › **Utilizes Human Safe Far-UV technology** with a 3 year lamp warranty.
- › **Instant on/off** at full output power, and frequent on/off cycles don't affect lamp life
- › **Easy-to-use** – Wave the saber 1-2" above surfaces for 2-5 seconds depending on amount of disinfection required.
- › **Dry, Chemical Free** – environmentally friendly, lamps produce no ozone.
- › **Powerful air disinfection** for social events. Stops airborne virus and bacteria before transmission.
- › **Sabers are available** in black or white.
- › **Flexible financing options** are available.
- › **Ergonomically designed** 3.6 lb that is evenly balanced.

Cinemas | Corporate | Education | Government | Hospitality
Museums | Theme parks and indoor attractions | Retail
Sports venues | Public Transit | Houses of worship





GermBuster Sabre

Powered By Sterilray™




AC Power Supply

GermBuster Sabre 150w

Specifications

Physical	
Lamp fixture dimensions (W x D x H)	30.25x3.5x3.5"(76.84x8.89x8.89cm)
Lamp fixture weight	3.6 lb
Lamp Length	10" (25.4cm)
Lamp surface area	271 cm ²
Operating temperature	40°~ +104°F (+5° ~ +40° C)
Operating humidity	10-85% RH
Mounting	handheld/brackets/stand
Finish color	White/Black
Housing material	Plastic
Electrical	
Power supply	100-270V AC 50/60 Hz
DC Adapter	EGO 56v 2.5Ah battery
Input power consumption	150w
Lamp	
Lamp Technology	Far-UV 222nm Excimer
Beam Angle	160°
222nm Irradiance (1.27 cm from lamp)	2450 μW/cm ²
Band pass filter	Not Necessary
Warranty	
Power supply warranty	1 year parts and labor
Lamp life warranty (pro-rated)	4 years

Optional Accessories

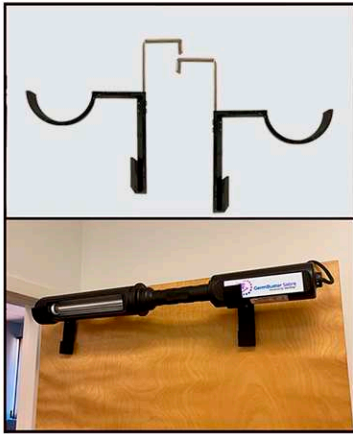

Door or Wall Brackets

Can be configured with hooks for over doors, dividers, or mounted to a wall for a permanent solution. Sold separately.



2.5Ah EGO battery



DC adapter and strap

Sabre Stand

Allows Sabre to be raised up to 7 feet. Sold separately.



Sabre Hard Case
EGO Battery, Charger,
DC Adapter and case
Sold separately.

Case exterior
38.4" x 16.8" x 6.4"
11 lbs



Sterilray Inc.
Life in a New Light™

www.sterilray.com